


# Fernco Flexible Coupling Installation


IN GROUND APPLICATION - For sewer, drain, waste and vent piping.




Loosen the stainless steel clamps. Do not remove clamps from coupling.

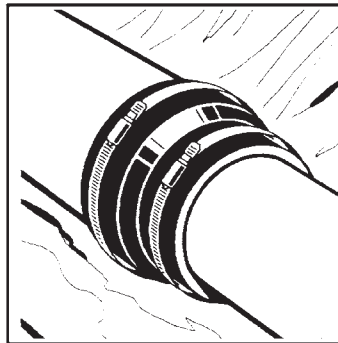


Slide flexible coupling over the pain spigot ends of the two pipe.

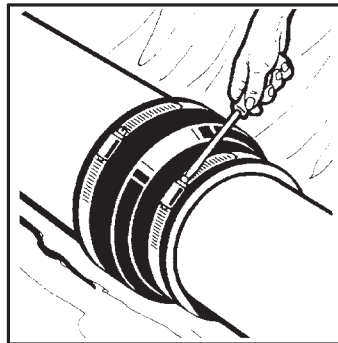


Tighten clamps to 60 inch-lbs. or torque.

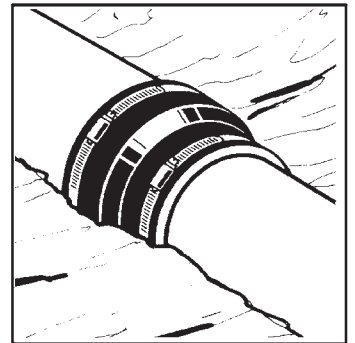


Pressure test\* before backfilling or concealing joint. Bed and backfill properly.

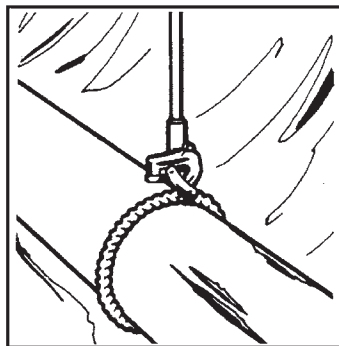


Fernco flexible couplings can be used to couple pipe when there is a break or an insertions is needed.

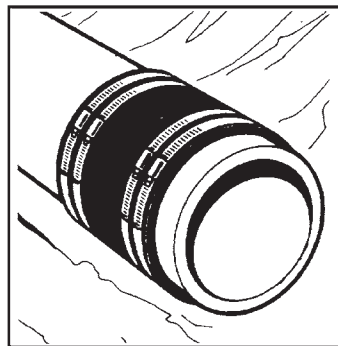

Remove pipe sections then slide flexible coupling over both pipe ends. (Remove damaged area if broken.)

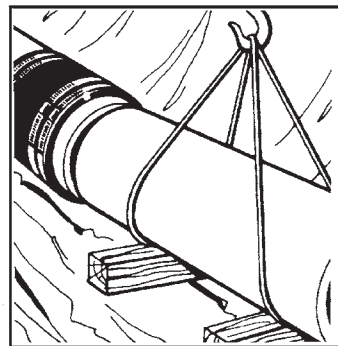

Insert new pipe or fitting then slide flexible coupling over new and old pipe ends.

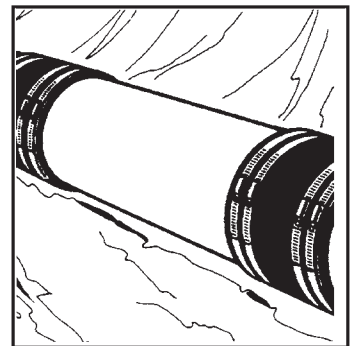

Tighten clamps to 60 inch-lbs. or torque. Pressure test\* before backfilling or concealing joint. Bed and backfill properly.



\*Maximum test pressure  
4.3 PSI (29.6 KPA)

United States  
PH: 810-653-9626  
FX: 810-653-8714

[www.fernco.com](http://www.fernco.com)

Canada  
PH: 519-332-6711  
FX: 519-332-8610

R1108